

Quick Setup Guide

NID-1070

Thank you for purchasing a Core Internet tablet from Naxa Electronics. Before using your tablet, take the time to read the User's Guide and save it for your reference. Then, read this guide to learn how to get started quickly with your new tablet.

This guide covers: 1) How to turn the tablet on; 2) How to unlock the screen; 3) How to get around; 4) How to connect to the Internet, and 5) How to add an account.

1) How to turn the tablet on

Press and hold the power button for 3 seconds until the screen turns on. It will take a while until the tablet is ready to be used.



The first time you start your tablet, you will see a Welcome screen. The tablet will guide you through the initial setup process and teach you a little bit about your tablet. You will have an opportunity to sign in with your Google account during this process. If you do not have a Google account, you will have an opportunity to create one. (You may choose to skip this process and create an account later.)

IMPORTANT: It is best to have a Wi-Fi connection available to complete the setup process.

Signing in with a Google account will immediately grant you access to everything associated with your Google account (e.g., Gmail).

2) How to unlock the screen

By default, the tablet will turn off the screen when it is inactive to save battery power. Press the power button once to wake the tablet and turn the screen back on.



When the tablet is woken from sleep, the screen will be locked.

To unlock the screen, simply tap and hold the lock icon, then swipe your finger up the screen.

3) How to get around

After the initial welcome screen, the Home screen will appear. You can add icons and widgets to the Home screen; you can move between Home screens by swiping left and right.

The Favorites tray appears on every Home screen and provides another way to quickly launch your apps.



At the bottom of each screen, there will always be a navigation bar with three buttons.

	Return to the previous screen. Once you back up to the Home screen, you cannot go back any further.
	Go to the main Home screen.
	See a list of screens you've worked with recently. Swipe up and down to browse the list of screens; swipe left or right to remove a screen (or tap the X). Tap a screen to open it.

4) How to connect to the Internet


Your tablet can connect wirelessly to the Internet with Wi-Fi.

To access the Wi-Fi settings: swipe down from the top edge of the Home screen, then tap the gray Notification bar that appears. Tap on the label "Wi-Fi" beneath the Wi-Fi icon to go to the Wi-Fi settings screen. Tap the Wi-Fi switch to set it to ON to turn on the Wi-Fi radio.

After the tablet turns on the Wi-Fi radio, the tablet will scan for available networks.



1. Tap the name of your network to select it from the list.

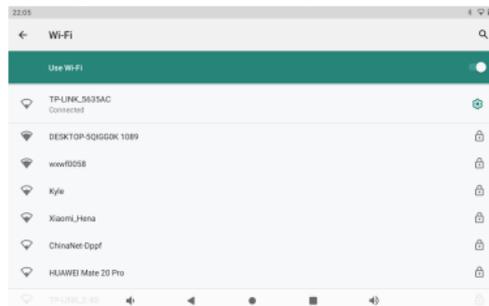


2. If your network is secured by a password, enter the password and then tap CONNECT. Your network will be labeled "Connected" if successful.



5) How to add an account

Your tablet works best when it is paired with a Google account. Google provides many services that can unleash the power of your tablet—all free of charge!

1. Swipe down from the top edge of a Home screen, then tap the gray notification bar that appears.

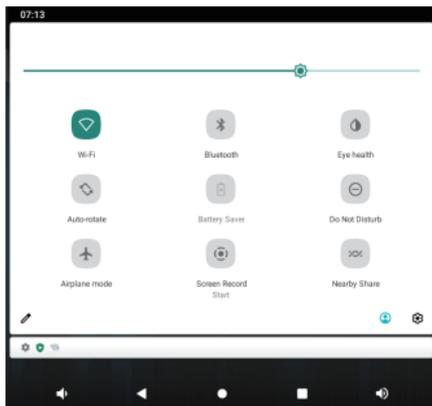

2. Tap the Settings icon to view the settings screen.



3. Scroll down until you see the **Personal** section. Tap **Accounts**, then **Add account**.

4. Tap **Google** to start adding a Google account.

If you don't have a Google account, you can sign up for a new one. Otherwise, tap **Existing** to link your Google account to your tablet.

Follow the on-screen instructions to finish adding your Google account.

For more information, please refer to the User's Guide, or visit our website at www.naxa.com.